

# Next Dimension Pro Easy-Out™ Sash System for Builders

## Features and Benefits

- Entire lower sash removes quickly and easily; simply unlatch sash release clips, lift and disengage sash
- No pulleys, cords or chains to detach or break
- Complete removal of lower sash allows access to the entire window from inside of home
- Pocket design creates a positive stop providing consistent pressure against weatherstrip; this tight seal improves air and water performance
- Structural integrity of extruded vinyl holds sash firmly in place to ensure trouble-free operation
- Overlapping of vinyl frame around sash compensates for subtle installation variances
- No tilt latches to break or replace
- Quick installation saves time and money



## 10 Easy Steps To Remove, Clean and Replace Your Easy-Out Sash



1. Open sash clips



2. Lift sash above clips



3. Shift sash to right within channel



4. Disengage sash by pulling outward and to the left



5. Complete removal of sash provides easy cleaning of lower sash



6. Exterior of upper sash is accessible from inside of house



7. Insert sash into channel above clips



8. Lower sash to sill



9. Fasten lock



10. Close sash clips

