



Excellent Choice

New Next Dimension Series

Drywall Return Instructions for Standard Unit Application

What you will need:

- Saw/Handsaw
- Utility Knife
- Pencil
- Hammer
- Wood Block

Drywall Return Extrusion:


White 10127908: 1/2" – 11/16"

Clay 10127909: 1/2" – 11/16"





Installation:

Step 1. Cut Drywall Return to appropriate length.

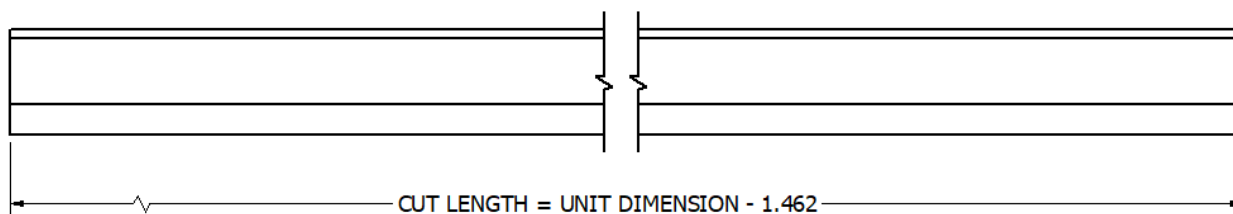

Step 2. Press Drywall Return into the accessory groove on the window frame. If required, use a hammer with a wood block as shown below.

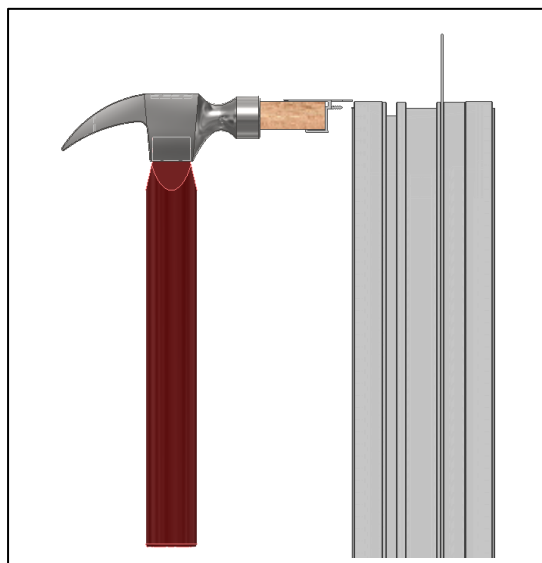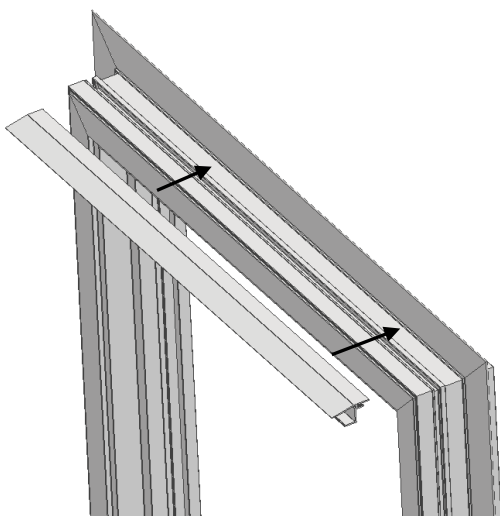

Step 3. Center drywall return on unit. Distance from edge of drywall return to edge of unit = 0.747"

