



New Next Dimension Series

Jamb Extension Instructions

Excellent Choice

What you will need:

- Tape Measure
- Stapler


Jamb Extension Clip:

White: 10186523




Installation:

- Step 1.** Install 3" Jamb Extension clips around perimeter of frame. Two on each corner and spaced every 18" along frame.

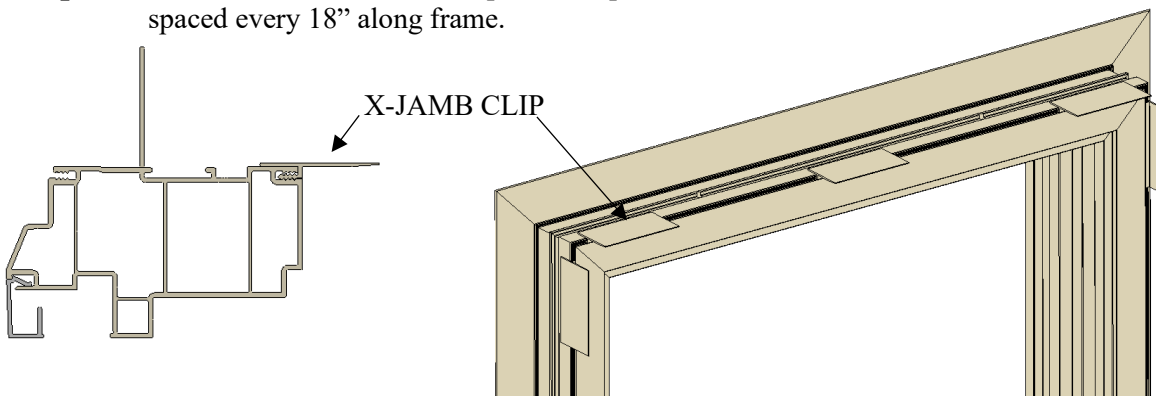

- Step 2.** Position jamb extension against the clips, as shown. Staple through the clip into the backside of the jamb extension with 3/8" x 1/2" staples

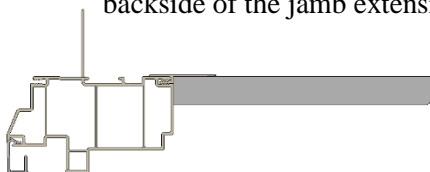

- Step 3.** Wrap jamb extension around the window. Staple corners of jamb cover with 7/16" x 1 1/2" staples

